HOME
DECORATORS
C O L L E C T I O N

BF-24692 PROVENCE MEDIA CABINET

INV#05059

ASSEMBLY INSTRUCTIONS

Made In China

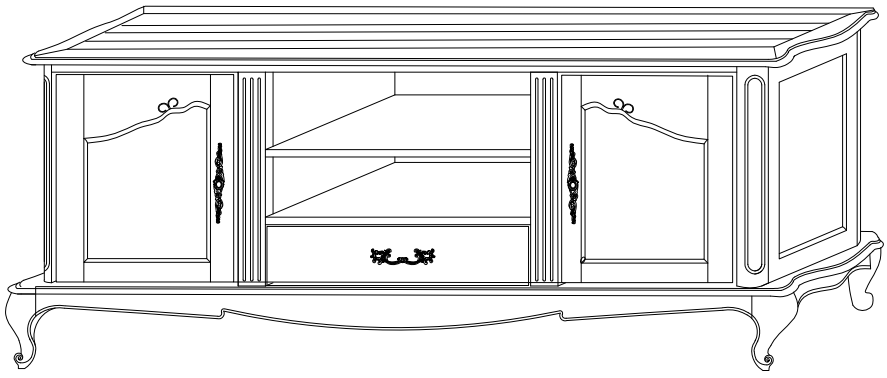

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A  TOP PANEL-1PC	B 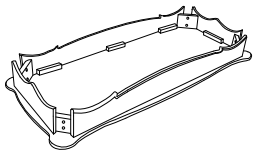 BOTTOM PANEL-1PC	C LEGS-4PCS
D 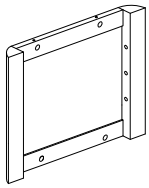 LEFT SIDE PANEL-1PC	E 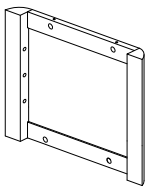 RIGHT SIDE PANEL-1PC	F  RIGHT STAND PANEL-1PC
G  LEFT STAND PANEL-1PC	H 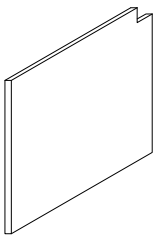 SMALL SHELVES-2PCS	I 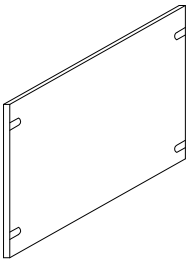 LARGE SHELF PANEL-1PC
J 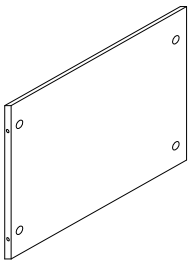 ACROSS PANEL-1PC	K ADORNING PANEL-1PC	L 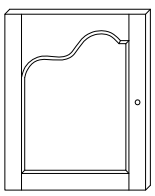 LEFT DOOR-1PC

M 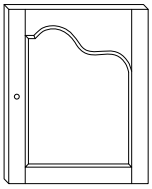 RIGHT DOOR-1PC	N 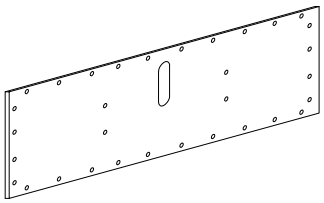 BACK PANEL-1PC	O 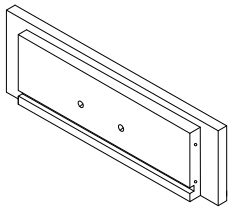 DRAWER PANEL FRONT-1PC
P 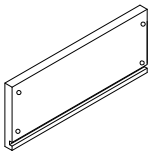 LEFT DRAWER PANEL SIDE-1PC	Q 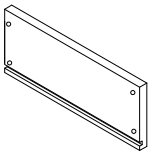 RIGHT DRAWER PANEL SIDE-1PC	R 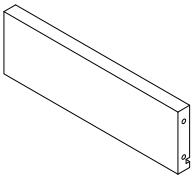 DRAWER PANEL BACK-1PC
S 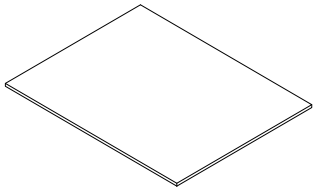 DRAWER PANEL BOTTOM-1PC	T  SMALL MAGNETS-2PCS	U  FEMALE MAGNETS-2PCS
V 5mm × 1/2" SCREWS-2PCS	W  CAM-BOLTS-22PCS	X CAM-LOCKS-22PCS
Y CAM-TOOL-1PC	Z  ALLEN WRENCH-1PC	A1 13mm × 1-3/4"  SCREWS-8PCS
B1 6mm × 1"  SCREWS-8PCS	C1 6mm × 1/2" SCREWS-24PCS	D1 6mm × 3/8" SCREWS-14PCS

E1  HINGES-4PCS	F1 HANDLES-2PCS	H1 HANDLE-1PC
I1 7mm × 5/8" SCREWS-32PCS	J1 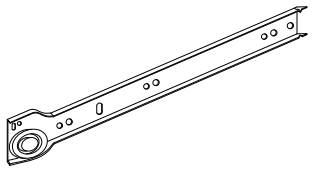 LEFT OUTER SLIDER-1PC	K1 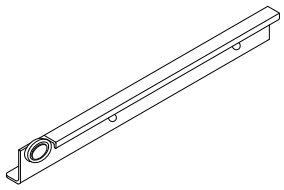 LEFT INNER SLIDE-1PC
L1 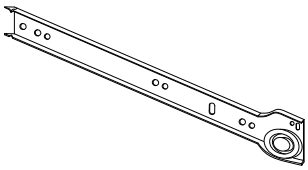 RIGHT OUTER SLIDER-1PC	M1 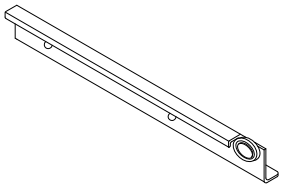 RIGHT INNER SLIDE-1PC	N1 8mm × 5/8" SCREWS-4PCS
O1 8mm × 1"  SCREWS-3PCS	P1  SHELF SUPPORTS-12PCS	Q1 DOWELS-2PCS
R1 7mm × 5/8" SCREWS-4PCS	S1 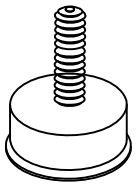 FEET-4PCS	T1  MAT SLICES-8PCS

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: ● UPON OPENING THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

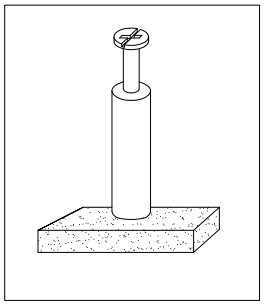

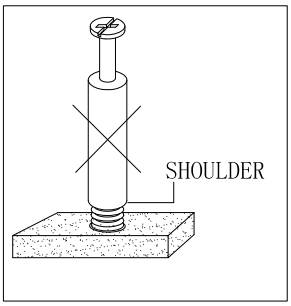

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

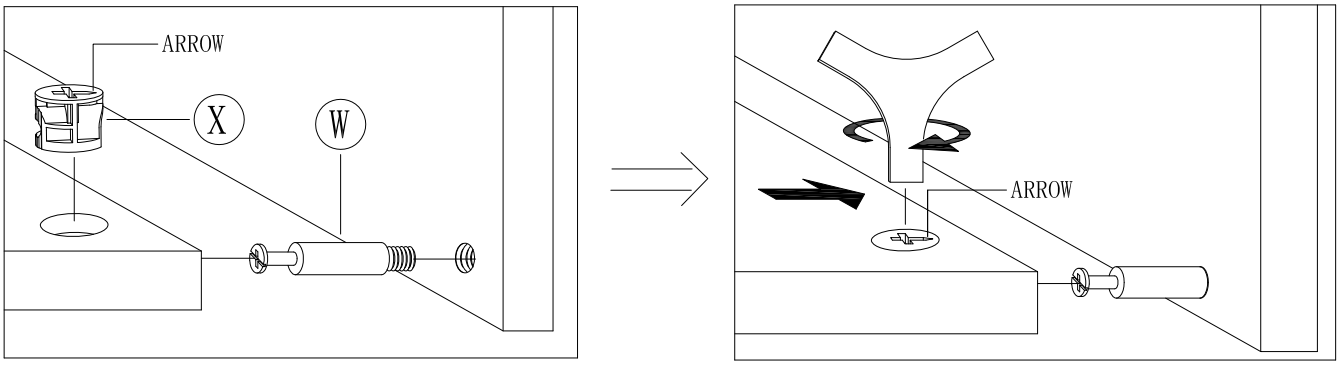

NOTE: ● THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

NOTE: THIS ASSEMBLY NEEDS TWO PEOPLE.

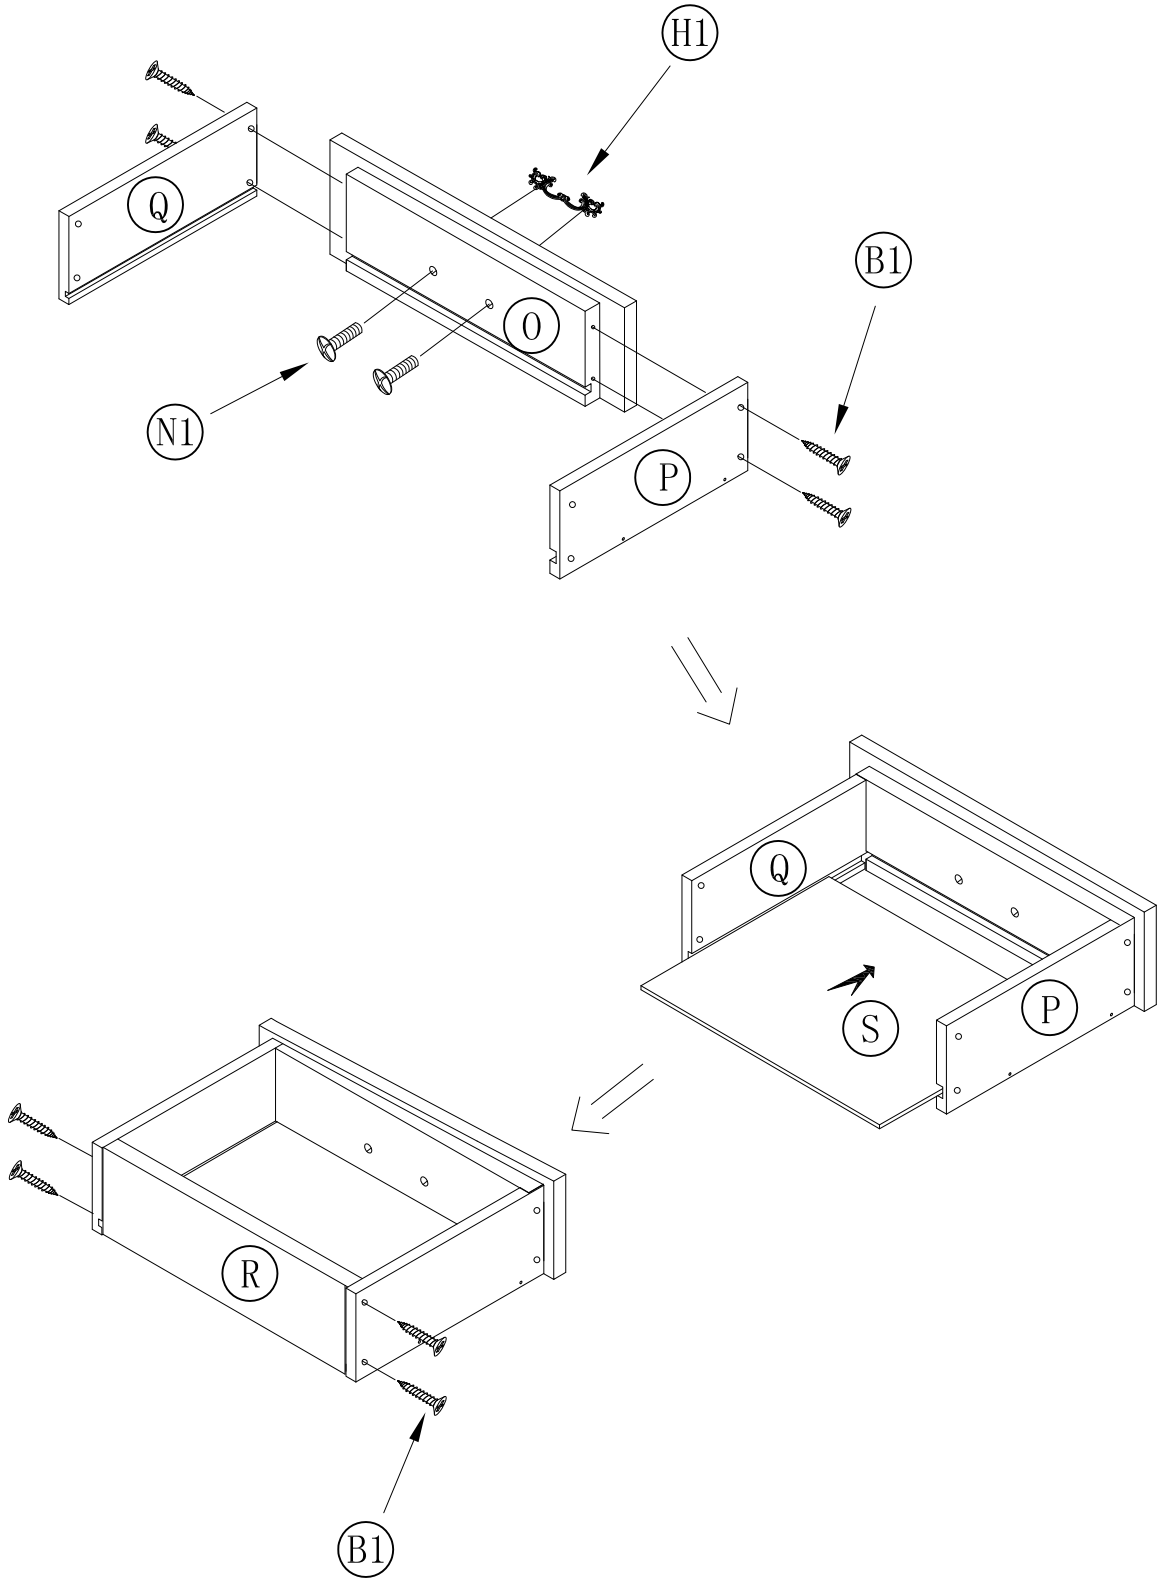

1). ASSEMBLE THE DRAWER.

- ATTACH DRAWER SIDE PANEL(P/Q) USING 4 SCREWS(B1).
- ATTACH THE HANDLE(H1) TO DRAWER PANEL FRONT(O) USING 2 SCREWS(N1).
- INSERT THE DRAWER PANEL BOTTOM(S) INTO THE SLOTS IN THE DRAWER PANEL SIDE(P/Q).
- ATTACH DRAWER PANEL BACK(R) BETWEEN LEFT DRAWER PANEL SIDE(P) AND RIGHT DRAWER SIDE(Q) USING 4 SCREWS(B1).

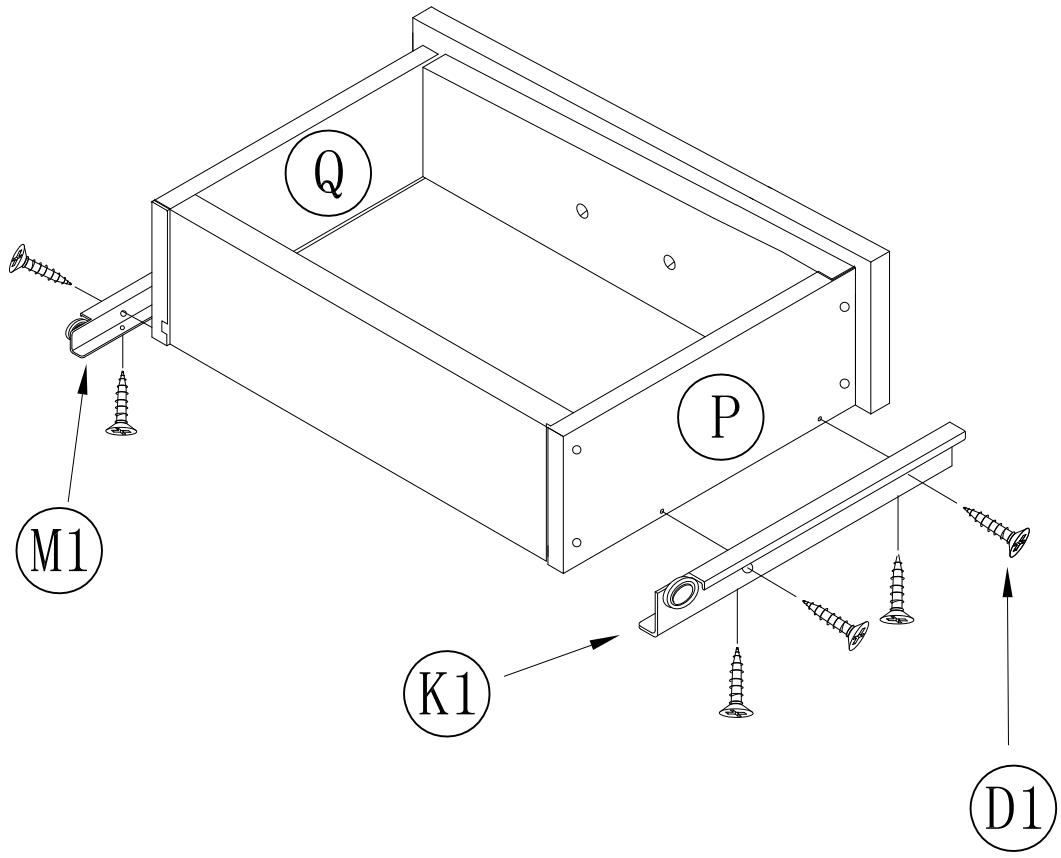

2). ASSEMBLE THE INNER SLIDE(K1/M1).

● ATTACH THE INNER SLIDES(K1/M1) TO DRAWER PANEL SIDES(P/Q) USING 8 SCREWS(D1).

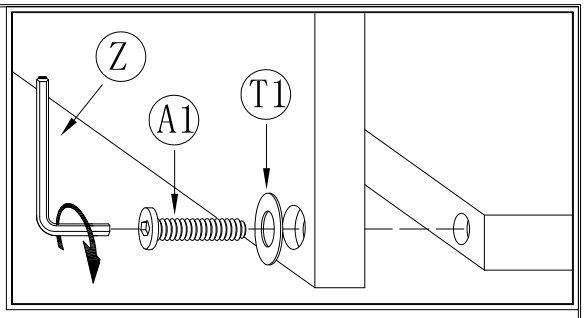

HOW TO USE THE ALLEN WRENCH

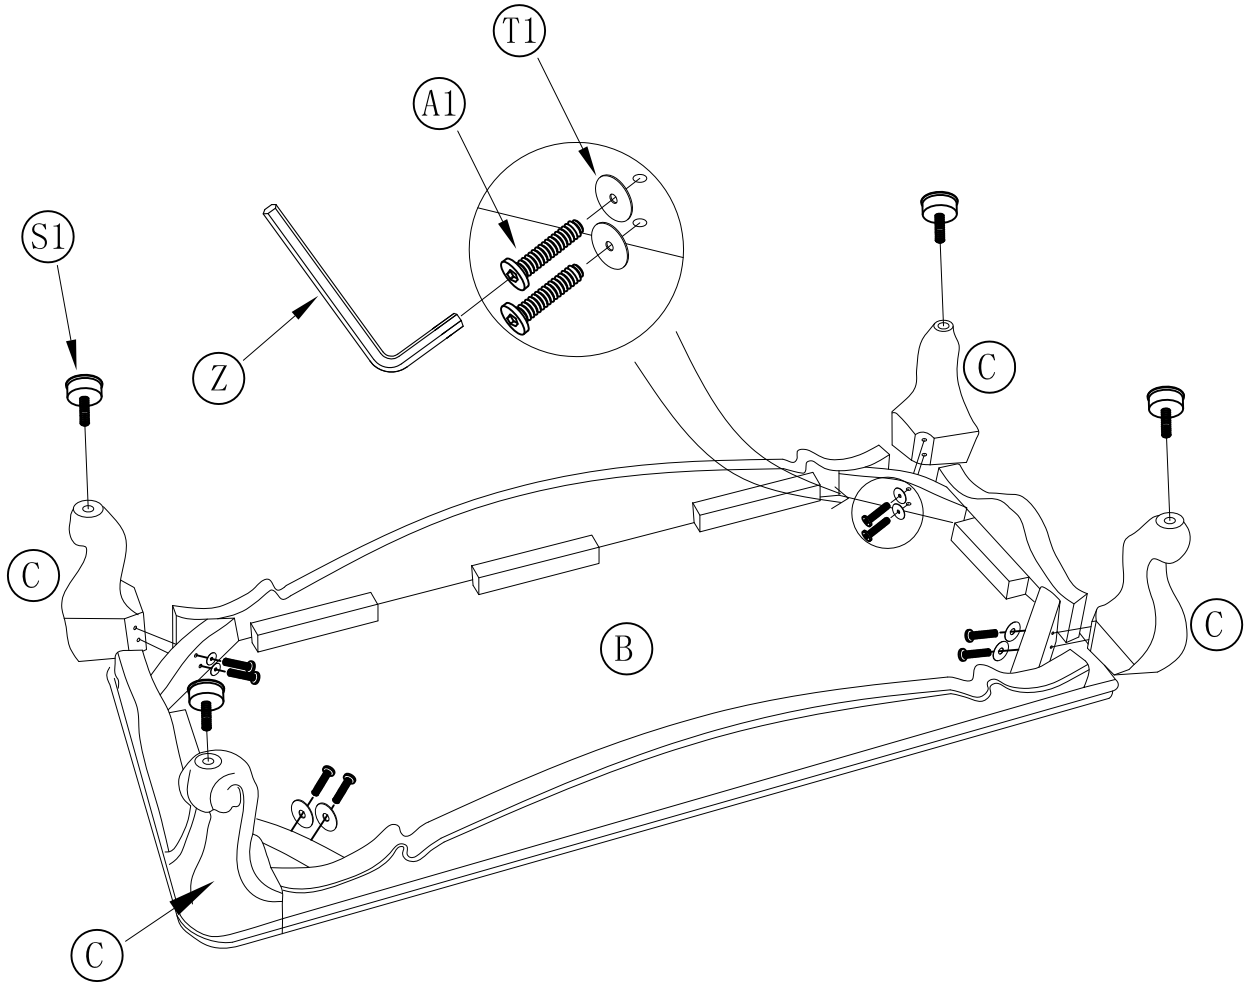

3). ASSEMBLE THE LEGS(C).

- ATTACH 4 LEGS(C) TO BOTTOM PANEL(B) USING 8 SCREWS(A1) AND MAT SLICES(T1).
- ROTATE 4 FEET(S1) INTO THE HOLES IN THE LEGS(C).

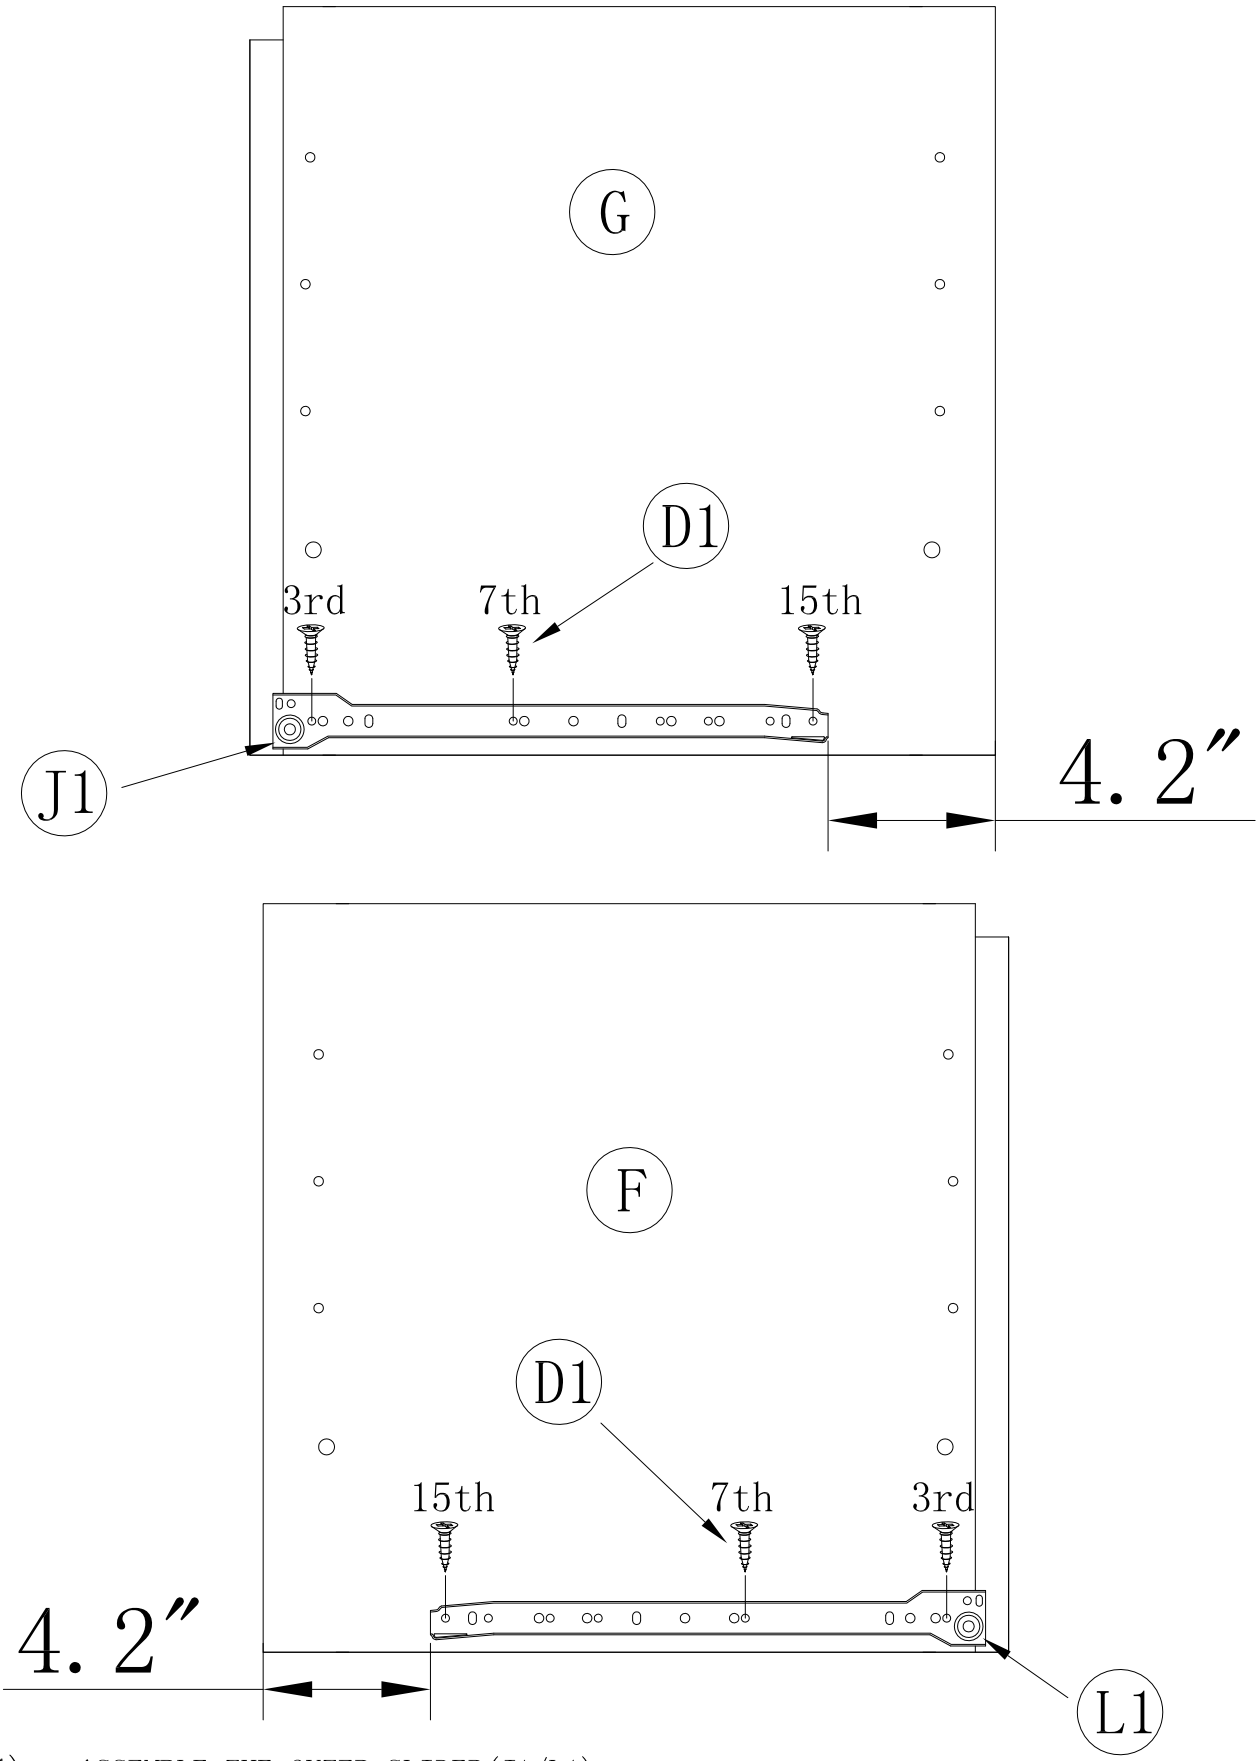

4). ASSEMBLE THE OUTER SLIDER(J1/L1).

● ATTACH OUTER SLIDERS(J1/L1) TO STAND PANELS(F/G) USING 6 SCREWS(D1).

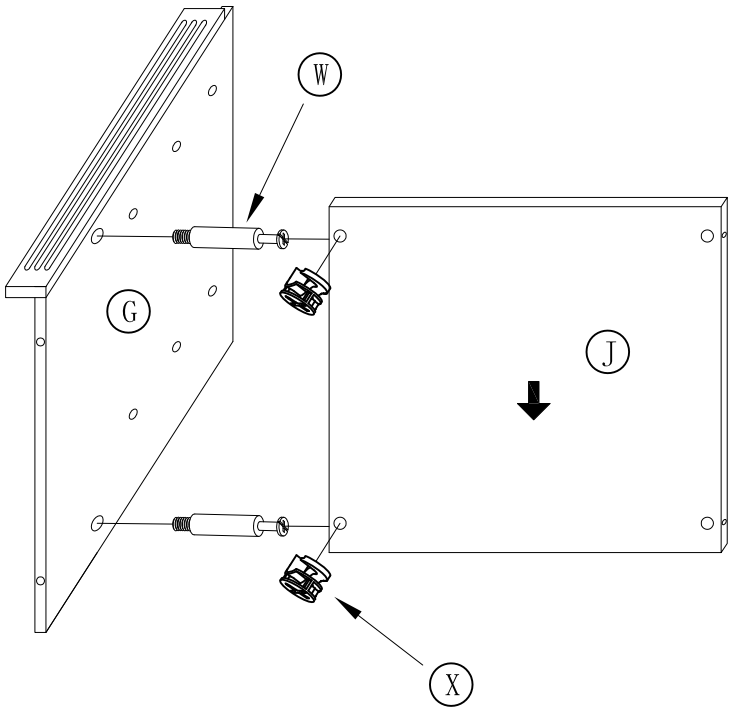

5). ASSEMBLE THE LEFT STAND PANEL(G).

- ROTATE THE 2 CAM-BOLTS(W) INTO THE HOLES IN THE LEFT STAND PANEL(G).
- PLACE CAM-BOLTS(W) INTO THE HOLES IN THE ACROSS PANEL(J) AND ATTACH USING 2 CAM-LOCKS(X).

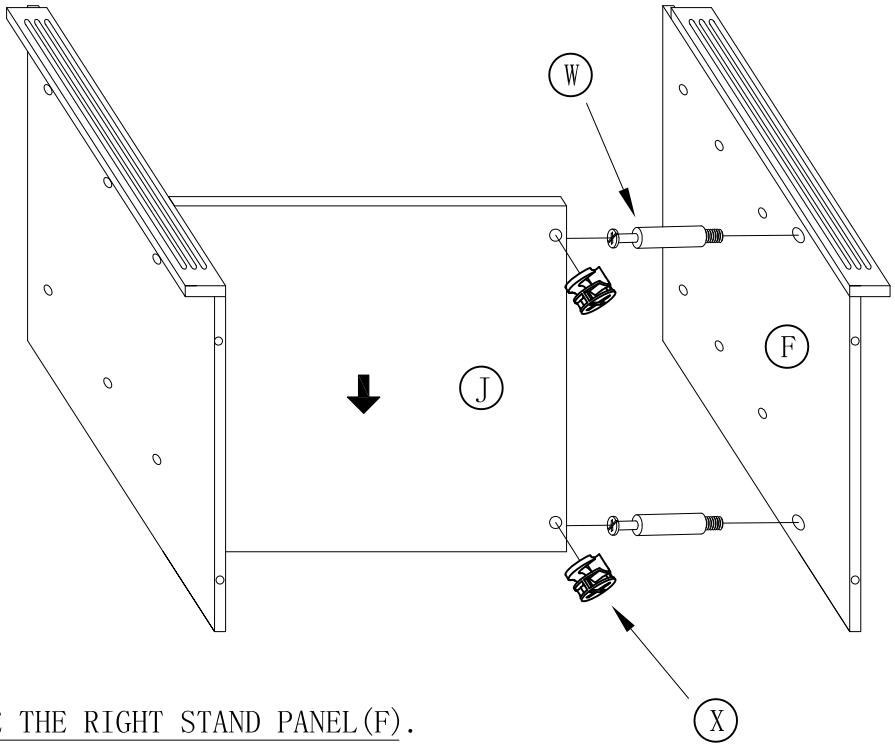

6). ASSEMBLE THE RIGHT STAND PANEL(F).

- ROTATE THE 2 CAM-BOLTS(W) INTO THE HOLES IN THE RIGHT STAND PANEL(F).
- PLACE CAM-BOLTS(W) INTO THE HOLES IN THE ACROSS PANEL(J) AND ATTACH USING 2 CAM-LOCKS(X).

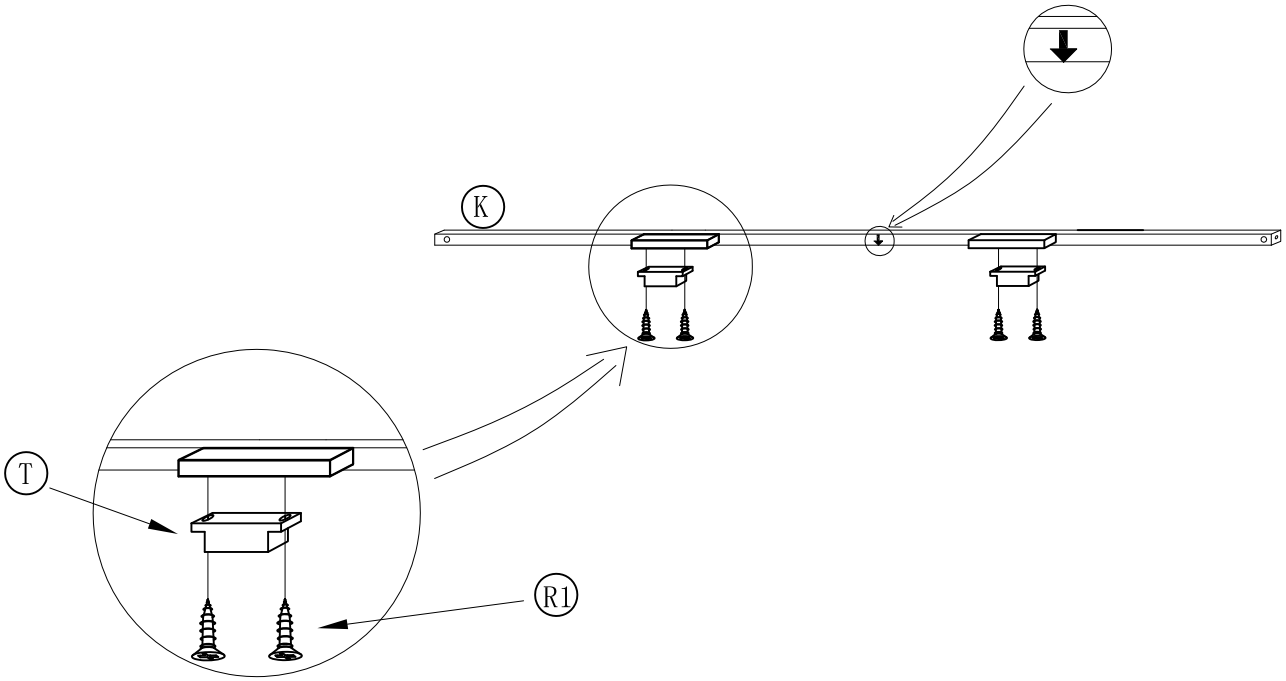

7). ASSEMBLE THE SMALL MAGNETS(T).

- ATTACH 2 SMALL MAGNETS(T) TO ADORNING PANEL(K) USING 4 SCREWS(R1).

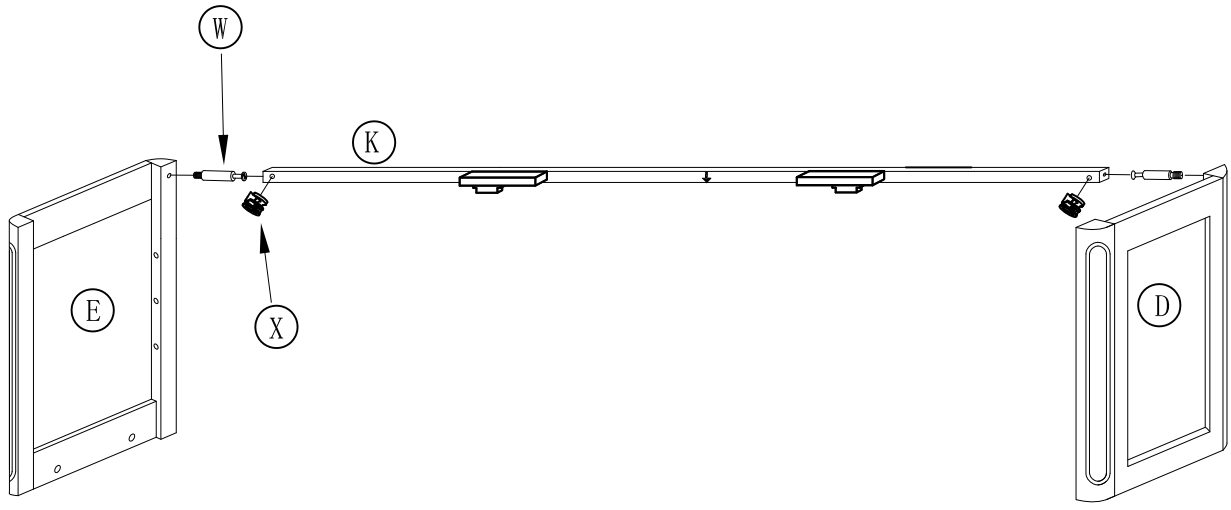

8). ASSEMBLE THE ADORNING PANEL(K).

- ROTATE THE 2 CAM-BOLTS(W) INTO THE HOLES IN THE SIDE PANELS(D/E).
- PLACE CAM-BOLTS(W) INTO THE HOLES IN THE ADORNING PANEL(K) AND ATTACH USING 2 CAM-LOCKS(X).

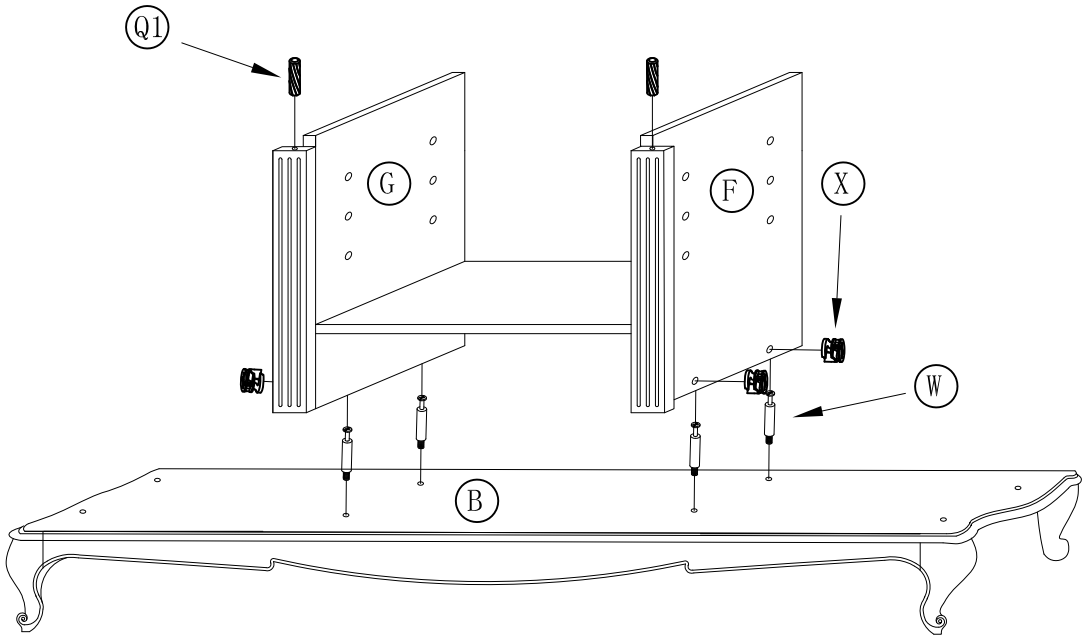

9). ASSEMBLE THE SIAND PANELS(F/G).

- ROTATE THE 4 CAM-BOLTS(W) INTO THE HOLES IN THE BOTTOM PANEL(B).
- PLACE CAM-BOLTS(W) INTO THE HOLES IN THE STAND PANELS(F/G) AND ATTACH USING 4 CAM-LOCKS(X).
- INSERT THE 2 DOWELS(Q1) INTO THE HOLES IN THE STAND PANELS(F/G).

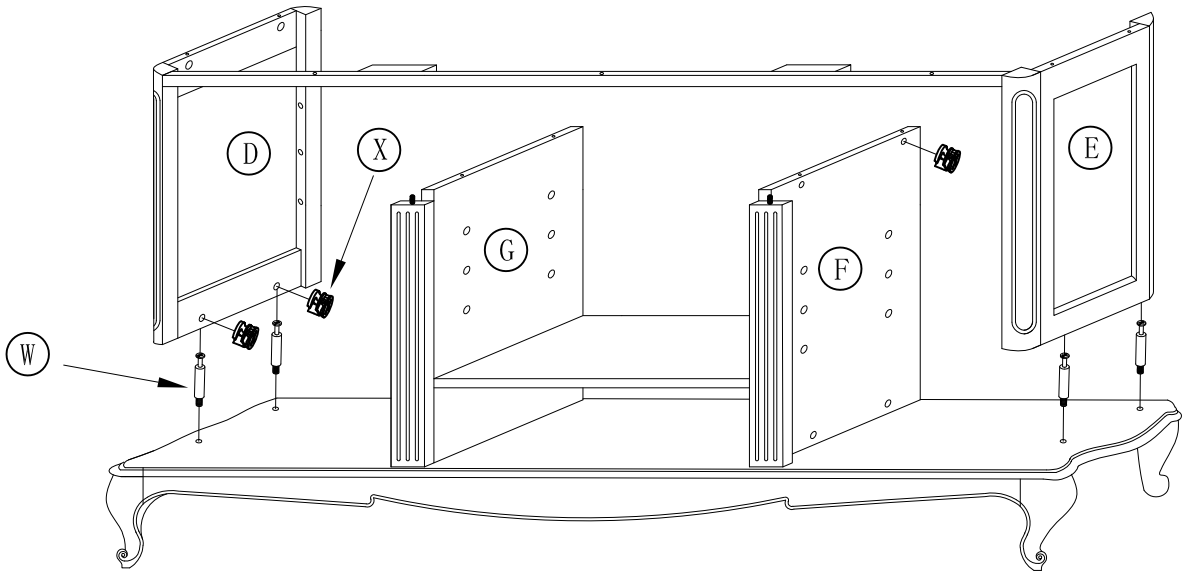

10). ASSEMBLE THE SIDE PANELS(D/E).

- ROTATE THE 4 CAM-BOLTS(W) INTO THE HOLES IN THE BOTTOM PANEL(B).
- PLACE CAM-BOLTS(W) INTO THE HOLES IN THE SIDE PANELS(D/E) AND ATTACH USING 4 CAM-LOCKS(X).

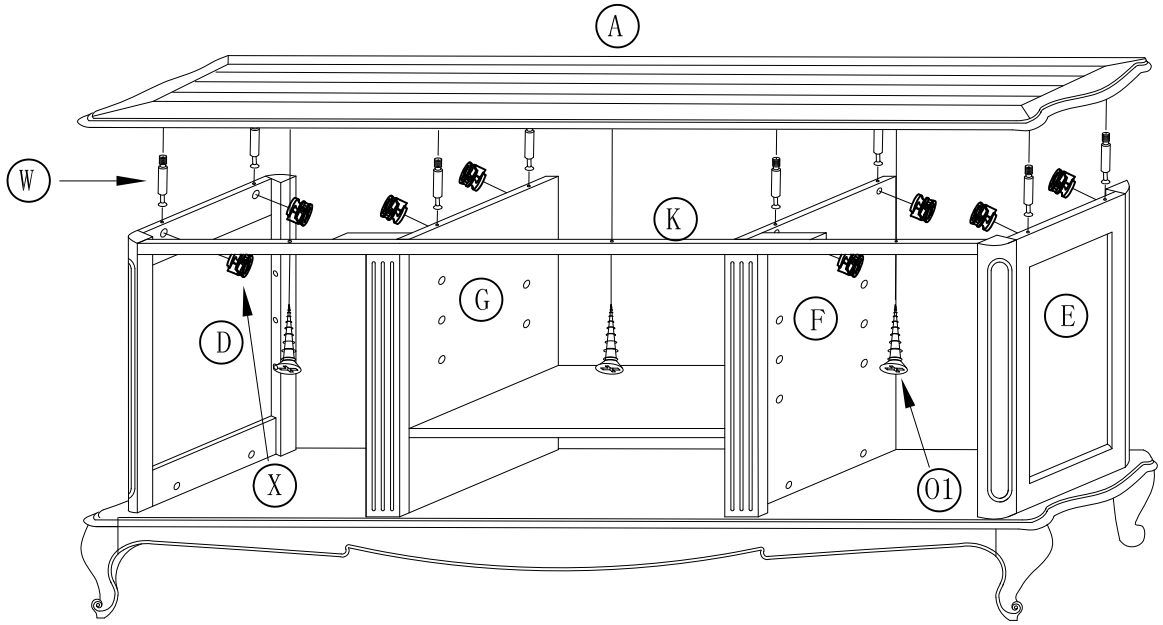

11). ASSEMBLE THE TOP PANEL(A).

- ROTATE 8 CAM-BOLTS(W) INTO THE HOLES IN THE TOP PANEL(A).
- PLACE CAM-BOLTS(W) INTO THE HOLES IN THE PANELS(D/E/F/G) AND ATTACH USING 8 CAM-LOCKS(X).
- ROTATE 3 SCREWS(01) INTO THE HOLES IN THE ADORNING PANEL(K).

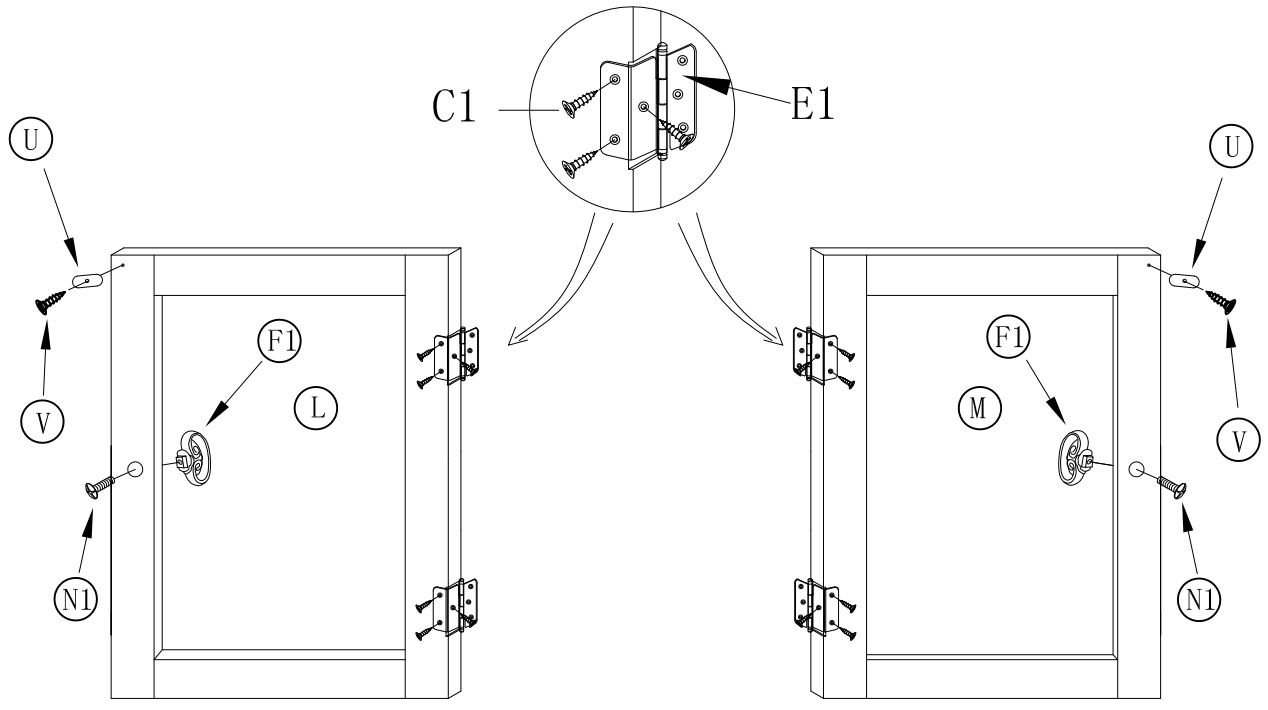

12). ASSEMBLE THE DOORS(L/M).

- ATTACH 2 HANDLES(F1) TO DOORS(L/M) USING 2 SCREWS(N1).
- ATTACH 2 FEMALE MAGNETS(U) TO DOORS(L/M) USING 2 SCREWS(V).
- ATTACH 4 HINGES(E1) TO DOORS(L/M) USING 12 SCREWS(C1).

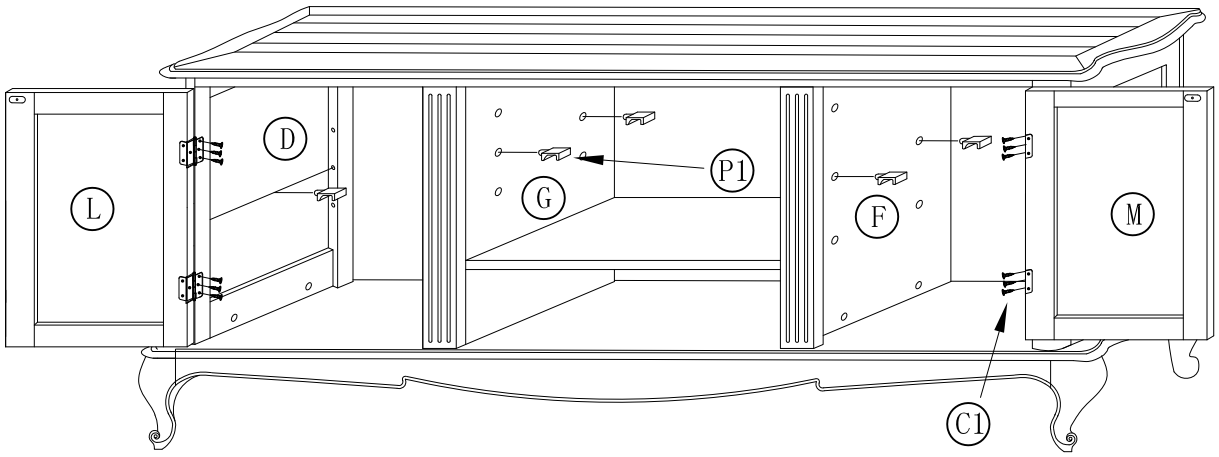

13). ASSEMBLE THE DOORS(L/M).

- ATTACH THE DOORS(L/M) TO SIDE PAENLS(D/E) USING 12 SCREWS(C1).
- INSERT 12 SHELF SUPPORTS(P1) INTO THE HOLES IN THE PANELS(D/E/F/G).

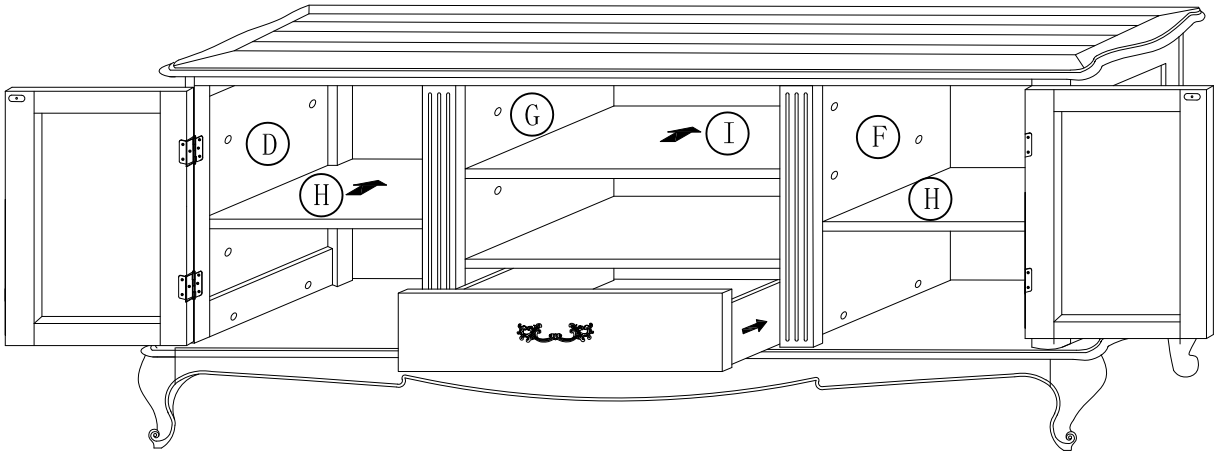

14). ASSEMBLE THE DRAWER AND SHELF PANELS(H/I).

- PLACE THE SHELVES(H/I) ONTO THE SHELF SUPPORTS(P1).
- SLIDE THE DRAWER INTO THE SLIDERS.

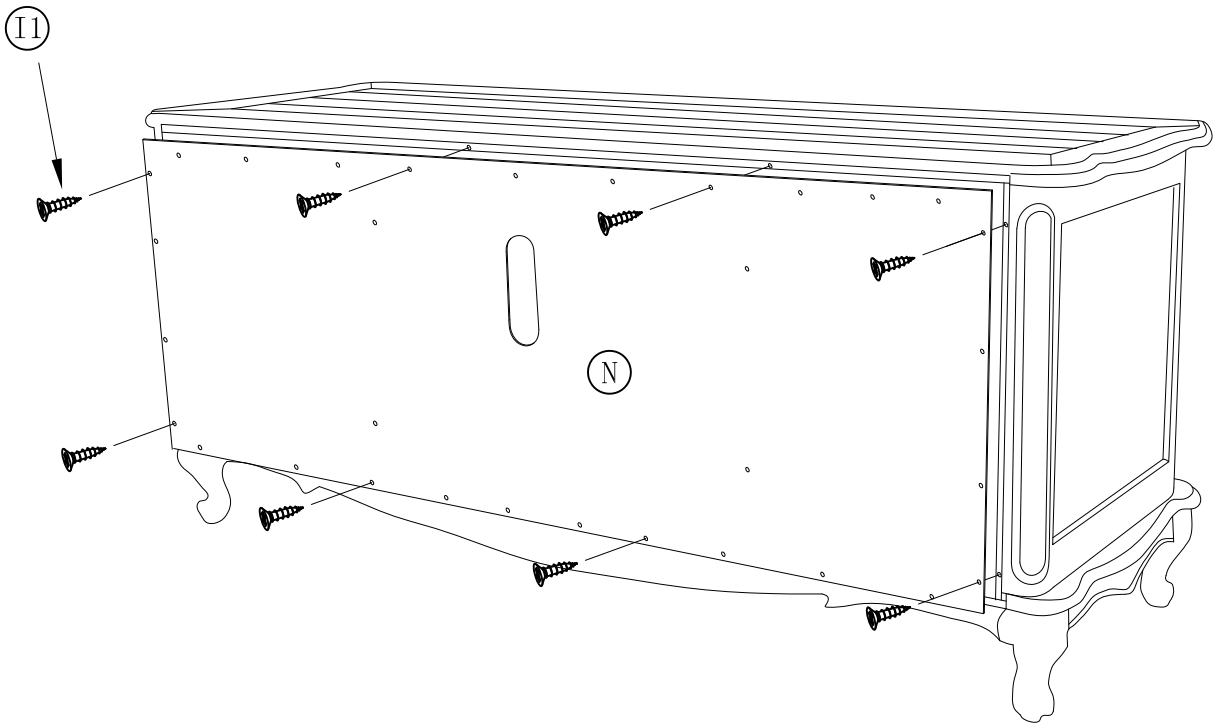

15). ASSEMBLE THE BACK PANEL(N).

● ATTACH THE BACK PANEL(N) USING 32 SCREWS(I1).

CAUTION:

This TV ARMOIRE is intended only for use with a product not weighing more than 240lbs.(108.86KGS) and having dimensions that will permit it to sit evenly on the stand. Refer to instructions for details. Using with other products, including products that weigh more than the maximum weight allowed, may result in instability, which may cause possible injury.

Model#:BF-24692

Distributed By: Home Decorators Collection

Manufacture Date: JANUARY 28, 2012

This stand is intended for Flat TV Size 36"